

**POWBOX V 25**

PORTABLE MULTIMEDIA PLAYER



PORTABLE MULTIMEDIA PLAYER

**POWBOX V25**



## contents

02	<b>INTRODUCTION</b>	4.4.2 how to record
03	<b>POWBOX V25</b>	
04	<b>A TOUR OF YOUR PMP</b>	18 5 <b>Applications</b>
06	<b>BEFORE STARTING</b>	5.1 set alarm
07	<b>MAIN MENU</b>	5.2 calendar
08	<b>1 VIDEO MODE</b>	19 6 <b>SET UP MODE</b>
1.1	video menu	6.1 set up menu
1.2	video playback	6.2 set time
1.3	delete video clip	6.3 speaker
10	<b>2 AUDIO MODE</b>	6.4 language
2.1	audio menu	6.5 storage
2.2	audio playback	6.6 TV out
2.3	delete audio track	6.7 auto power OFF
12	<b>3 PHOTO MODE</b>	6.8 default
3.1	photo menu	6.9 upgrade
3.2	photo playback	22 7 <b>FORMAT</b>
3.3	rotate photo	23 8 <b>BLUETOOTH</b>
3.4	slide show	8.1 bluetooth stereo
3.5	delete photo	8.2 prepare your bluetooth headset
15	<b>4 RECORDING MODE</b>	8.3 pairing the headset with your handset
4.1	recording menu	8.4 pairing the headset with your player
4.2	record video (AV in)	
4.2.1	how to connect	25 9 <b>ABOUT i.Tech</b>
4.2.2	how to record	26 <b>CARE AND MAINTENANCE</b>
4.3	record video memo (Mic in)	27 <b>SAFETY INFORMATION</b>
4.3.1	how to connect	28 <b>TROUBLESHOOTING</b>
4.3.2	how to record	29 <b>PRODUCT SPECIFICATIONS</b>
4.4	record audio (Audio in)	
4.4.1	how to connect	

## introduction

 
Thank you for purchasing the i.Tech PowBOX V25.

i.Tech PowBOX V25 Portable Multimedia Player is a multi-functional mobile media centre enabling you to have vivid and high quality video and audio playback as well as recording your favourite movies TV Clips and music. You can use this PMP to review and store your photos. Also, With the built in Bluetooth technology and the Bluetooth stereo Headset, PowBOX V25 Portable Multimedia Player provides you unprecedented mobile music enjoyment. Please read this user guide thoroughly to ensure you get the maximum benefits from your PowBOX v25.


## PowBOX V25

Please review the instructions below for battery charging , data transferring, and battery and SD/MMC card insertion.


### Battery charging

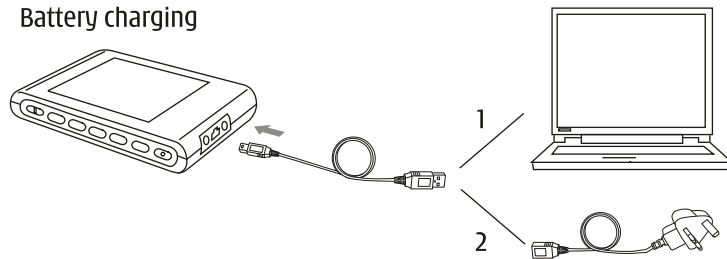

### Data transferring

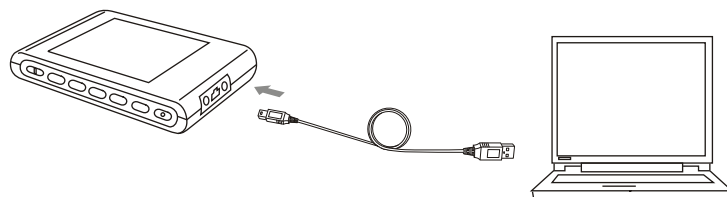 


### Battery and SD/MMC Card Insertion

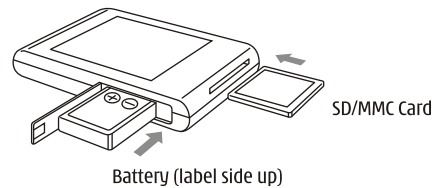 


## a tour of your PMP

i.Tech PowBox V25 Portable Multimedia Player

  - 01 POWER button - To turn on/off the PMP.
- 02 BACK button - Press to go back to the previous menu.
- 03 SOFTKEY 1 button - Command key in selected menu.
- 04 SOFTKEY 2 button - Command key in selected menu.
- 05 UP button - Move Cursor Up/Increase Volume/Zoom In.
- 06 DOWN button - Move Cursor Down/Decrease Volume/Zoom Out.
- 07 SELECT DIAL - Turn to move the Cursor to select. Press down to Confirm/Start/Pause/Resume/Stop.
- 08 MIC
- 09 LCD DISPLAY
- 10 MEMORY CARD SLOT - For external memory card (SD/MMC Card).

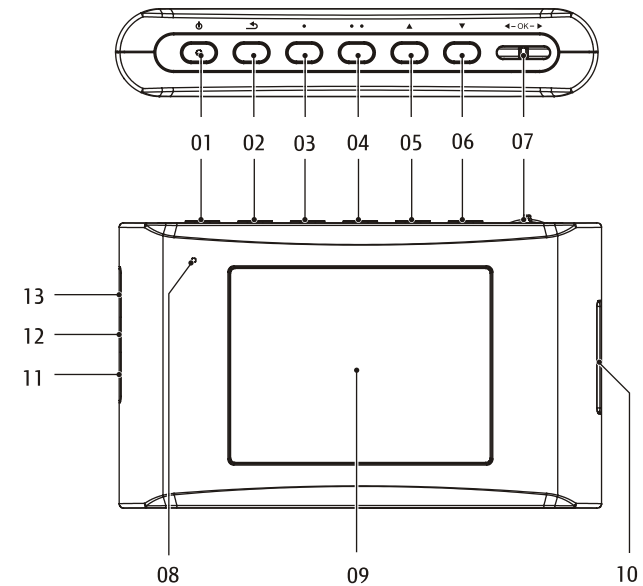



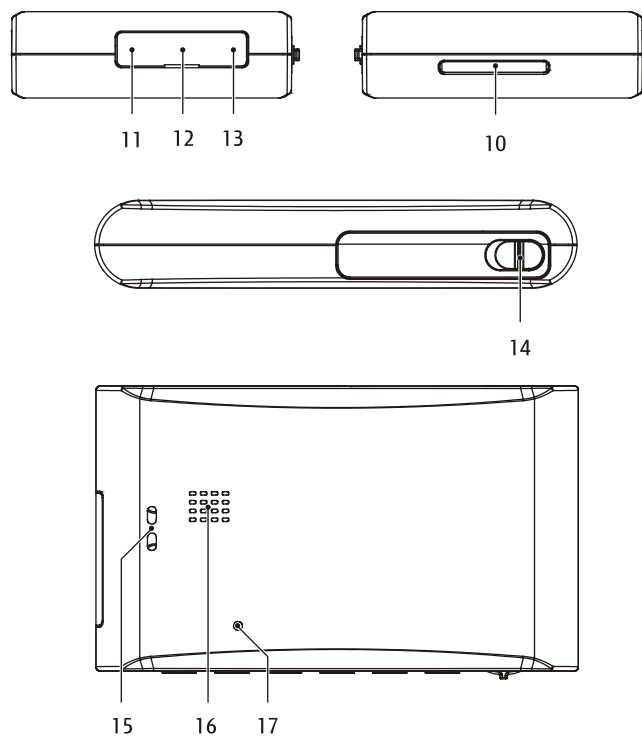




- 11 AV IN interface - For audio/video signal input from other equipments.
- 12 USB interface - For battery recharging and PC data transfer.
- 13 AV OUT interface - For audio/video signal output to other equipment.
- 14 BATTERY Compartment - For the rechargeable Li-ion/Ploymer Battery.
- 15 LANYARD HOLE
- 16 SPEAKER
- 17 RESET button




## before starting

 - Use only the iTech USB cable or AC power USB charger to charge your PMP.
- To prevent the battery from early expiry, you MUST fully charge the battery for a minimum 12 hours before using for the first time.
- Charge until the LED is flashing and colour changes.

### BASIC OPERATIONS

- Press and hold the POWER button  for 3 seconds to turn ON the PMP.
- Press the UP / DOWN  /  or turn the SELECT DIAL  to select the menu items.
- To confirm, press down the SELECT DIAL .
- At any menu, press BACK button  to go back to the previous menu.
- To shut down the PMP, at any menu, press and hold the POWER button  for 3 seconds.
- To turn the LCD ON/OFF, press and hold the SOFTKEY 1 button for 3 seconds.
- To prevent any interruption occurring during playback and recording, you can switch the PMP to a HOLD mode. Press and hold the SOFTKEY 2 button for 3 seconds.

## main menu

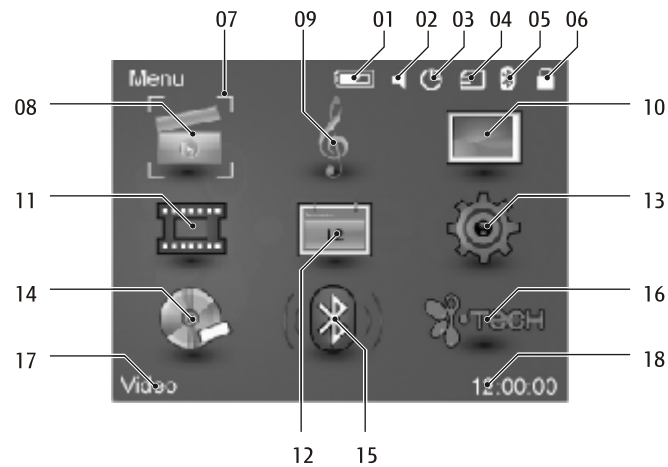

- 1 Battery level indicator
- 2 Speaker
- 3 Timer
- 4 External Memory Card indicator
- 5 Bluetooth Activation indicator
- 6 HOLD/Lock mode
- 7 Cursor
- 8 Video
- 9 Audio
- 10 Photo
- 11 Recording
- 12 Applications
- 13 Setup
- 14 Format
- 15 Bluetooth
- 16 Company information
- 17 Item name
- 18 Clock display

\*The actual display will show only the applicable items.

## 1 video mode

### 1.1 Video Menu



1. In Main Menu, press the UP / DOWN ▲/▼ or turn the SELECT DIAL to move the Cursor to select **Video**.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Video Mode.
3. Move Cursor to select the Video clip you want to playback.
4. To display the selected video clip's information, press SOFTKEY 1 button. The following information will be shown on screen:  
Clip Title  
Record Date  
Clip Sequence  
Duration

5. To select different PLAYBACK mode, press the UP button. The selected mode will be shown on top of the Menu:
  - PLAYBACK ONCE - Playback the selected video clip only once.
  - 🔄 REPEAT - Repeat playing the same video clip
  - 🔄 REPEAT ALL - Repeat playback all video clips
  - ⌚ RANDOM PLAYBACK - Playback all video clips at random
6. To turn the sound of the PMP ON/OFF, press the DOWN button.

 
### 1.2 Video Playback



1. In the Video Menu, move the Cursor to the clip you want to play, then press down the SELECT DIAL to start.
2. To adjust the sound, press the UP/DOWN button to increase/decrease the volume.
3. For Fast Forward, turn and hold the SELECT DIAL to Right, Hold left for Rewinding.

4. To go to the previous or next video clip, turn the SELECT DIAL to Right or Left respectively.
5. To pause or resume playback, press down the SELECT DIAL.

### 1.3 Delete Video Clip

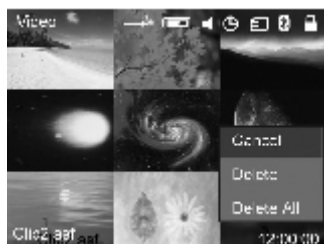

1. In the Video Menu, move the Cursor to the video clip you want to delete.
2. Press the SOFTKEY 2 button to display the Delete Menu
3. Turn the SELECT DIAL ◀-OK-▶ to select desired option.
  - Cancel - to cancel operation and go back to previous menu
  - Delete - to delete the selected video clip

- Delete All - to delete all the video clips Bullet point all 3 points more here.

4. Press down the SELECT DIAL to confirm selection.

## 2 audio mode

### 2.1 Audio Menu



1. In Main Menu, move the Cursor to select **Audio**.
2. Press down the SELECT DIAL ◀-OK-▶ to go to **Audio Mode**.
3. Move the Cursor to select the audio track you want to play.

\*Please note that the audio track will be in MP3 format.

 
4. To select different PLAYBACK mode, press the UP button. Then the selected mode will be shown on top of the Menu :
  - PLAYBACK ONCE - Playback the selected track only once.
  - ↺ REPEAT - Repeat playback the same track
  - ↻ REPEAT ALL - Repeat playback all tracks
  - Ⓜ RANDOM PLAYBACK - Playback all audio tracks at random
5. To mute/unmute the sound of the PMP, press the DOWN button ▼ .

## 2.2 Audio Playback



1. In the Audio Menu, move the Cursor to select track you want to play.
  2. Press down the SELECT DIAL  
◀-OK-▶ to start.
  3. To adjust the sound, press UP/DOWN button to increase/decrease the volume.
  4. To Fast Forward, turn and hold the SELECT DIAL to Right, To rewind, turn and hold the SELECT DIAL to the left.
  5. To go to the previous or next audio track, turn the SELECT DIAL to the Right or Left respectively.
  6. To pause or resume playback, press down the SELECT DIAL.
- \* To save battery power, you can turn Off the LCD by pressing and holding the SOFTKEY 1 button for 3 seconds.

## 2.3 Delete Audio Track

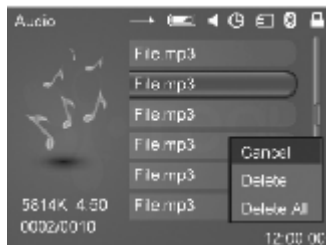

1. In the Audio Menu, move the Cursor to the track you want to delete.
  2. Press the SOFTKEY 2 button to display the Delete Menu
  3. Move the Cursor up or down to select desired option.
- Cancel - cancel operation and go back to previous menu  
Delete - Delete the selected track  
Delete All - Delete all audio tracks.
4. Press down the SELECT DIAL to confirm selection.

# 3photo mode

## 3.1 Photo Menu



1. In Main Menu, move the Cursor to **select Photo**.
  2. Press down the SELECT DIAL  
◀-OK-▶ to go to Photo Mode.
  3. In Photo Menu, move the Cursor to select the photo you want to review.
  4. To display the selected photo's information, press the SOFTKEY 1 button, the following information will be shown on screen:  
Film name  
Shooting date  
Shooting time  
Photo sequence
- \* Please note that the photo is in jpg format.
5. To select different PLAYBACK mode, press the UP button. Then the selected mode will be shown on top of the Menu :  
→ PLAYBACK - Display the selected photo only  
∞ SLIDE SHOW - Slide show playback mode.  
R RANDOM PLAYBACK - Display photos at random

## 3.2 Photo Playback



1. In Photo Menu, move the Cursor to the photo you want to review.
2. Press down the SELECT DIAL  
◀-OK-▶ to display the photo.
3. Turn the SELECT DIAL ◀-OK-▶ for the next or previous photo.
4. To zoom in or out the photo image, press the UP/DOWN button.



### 3.3 Rotate Photo



 
For viewing convenience, you can rotate the photo in the LCD. There are 4 options for selection: 0°, 90°, 180° & 270°

1. In Photo Menu, move the Cursor over the photo you want to display.
2. Press the SOFTKEY 2 button to display the Rotate & Print menu.
3. Turn the SELECT DIAL ◀-OK-▶ to select ROTATE. Then press down to confirm
4. Turn the SELECT DIAL ◀-OK-▶ to select desired angle of display, then press down to confirm. The photo image will rotate accordingly.
5. To resume the original image, just press down the SELECT DIAL ◀-OK-▶.

### 3.4 Slide Show

1. To play a Slide Show of your photos, you can press the DOWN button to set the photos's display duration to 3 / 5 / 15 seconds, then press the SOFTKEY 1 button to start.
2. To pause or resume the Slide Show, just press down the SELECT DIAL ◀-OK-▶.

### 3.5 Delete Photo

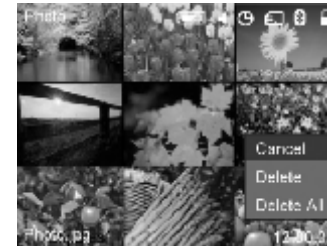

1. In the Photo Menu, move the Cursor to the photo you want to delete.
2. Press the SOFTKEY 2 button to display the Delete Menu
3. Turn the SELECT DIAL ◀-OK-▶ to select desired option.

- CANCEL - cancel operation and go back to previous menu  
 DELETE - Delete the selected photo  
 DELETE ALL - Delete all photos.
4. Press down the SELECT DIAL to confirm selection.

# 4 recording mode

15

The i.Tech PowBOX V25 Portable Multimedia Player provides you with a variety of recording capabilities. You can record your favorite TV shows, movies from VCD/DVD, and songs and music from your audio equipment (e.g. Hi-Fi system.) You can also use the PMP as a general voice recorder to record voice memos. The video and audio data will be stored in the PMP's internal memory or onto an external SD/MMC memory card. Please note that the maximum memory size of the SD/MMC card is upto 1GB.

## 4.1 Recording Menu



- Record TV / Movies
- Voice Record
- Bluetooth

## 4.2 Record Video (AV in)



 
### 4.2.1 How to Connect

To record a video onto your PMP, just connect the AV e.g TV equipment to your PMP with the AV cable provided.

1. Plug Red, White and Yellow ends of the AV cable into the Audio and Video Out sockets of your AV equipment:

Red - Audio OUT (R), White - Audio OUT (L), Yellow - Video OUT

2. Plug the Black end of the AV cable into the AV IN interface of your PMP.

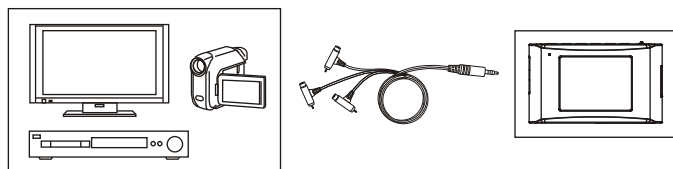

16

## 4.2.2 How to Record

1. In Main Menu, move the Cursor to select RECORDING.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Recording Mode.
3. To set the duration of the video to be recorded, press the SOFTKEY 1 or the SOFTKEY 2 button to set the timer. Press the SOFTKEY 1 button to increase record length by 1 min and the SOFTKEY 2 button to decrease. Press the UP button to increase record length by 10 mins and the DOWN button to decrease.
4. Move the Cursor to select AV IN and press down the SELECT DIAL ◀-OK-▶ to begin recording.
5. Recording will stop automatically at the preset time, or you can stop the recording at any time by pressing down the SELECT DIAL ◀-OK-▶.

## 4.3 Record Video Memo (Mic in)



### 4.3.1 How to Connect

You can record the voice memo through the built-in microphone of your PMP or an external microphone. If you use an external microphone, just plug the other end of the microphone into your PMP's AV IN SOCKET.

## 4.3.2 How to Record

1. In Main Menu, move the Cursor to select RECORDING.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Recording Mode.
3. To set the duration of the voice memo to be recorded, press the SOFTKEY 1 or the SOFTKEY 2 button to set the timer. Press the SOFTKEY 1 button to increase record length by 1 min and the SOFTKEY 2 button to decrease. Press the UP button to increase record length by 10 mins and the DOWN button to decrease.
4. Move the Cursor to select MIC IN and press down the SELECT DIAL ◀-OK-▶ to begin recording.
5. Recording will stop automatically at the preset time, or you can stop the recording at any time by pressing down the SELECT DIAL ◀-OK-▶.

#### 4.4 Record Audio (Audio in)

 


##### 4.4.1 How to Connect

To record an audio track or song onto your PMP, just connect the audio equipment to your PMP with the audio cable provided.

1. Plug one of the ends of the audio cable into the Audio Out socket of your audio equipment.

2. Plug the other end of the audio cable into the AV IN interface of your PMP.



##### 4.4.2 How to Record

1. In Main Menu, move the Cursor to select RECORDING.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Recording Mode.
3. To set the duration of the audio to be recorded, press the SOFTKEY 1 or the SOFTKEY 2 button to set the timer. Press the SOFTKEY 1 button to increase record length by 1 min and the SOFTKEY 2 button to decrease. Press the UP button to increase record length by 10 mins and the DOWN button to decrease.
4. Move the Cursor to select AUDIO IN and press down the SELECT DIAL ◀-OK-▶ to begin recording.
5. Recording will stop automatically at the preset time, or you can stop the recording at any time by pressing down the SELECT DIAL ◀-OK-▶.

## 5 applications

1. In Main Menu, move the Cursor to select APPLICATIONS.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Applications Mode.



There are 2 applications in this Mode:

- 1) Alarm Clock
- 2) Calendar

#### 5.1 Set Alarm

1. In Applications Menu, move the Cursor to select ALARM.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Alarm Menu.



How to set alarm:

1. Press the SOFTKEY 1 button to set alarm ON/OFF.
2. Turn the SELECT DIAL ◀-OK-▶ to move the Cursor to left or right.
3. Press UP/DOWN button to input the desired time.
4. Press down the SELECT DIAL ◀-OK-▶ to confirm the setting.

#### 5.2 Calendar

1. In Applications Menu, move the Cursor to select CALENDAR.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Calendar Menu.



- UP/DOWN button:  
Press to select PREVIOUS / NEXT year.
- SELECT DIAL ◀-OK-▶ :  
Turn to select PREVIOUS / NEXT month.

# 6 set up mode

19

With this mode, you can set various settings for your PMP such as clock, sound volume, display language, storage memory, display mode, power saving, formatting as well as factory settings.



## 6.1 SET UP Menu

1. In Main Menu, move Cursor to select SET UP.
2. Press down the SELECT DIAL ◀-OK-▶ to go to SETUP Mode.

## 6.2 Set Time

1. In Set Up Menu, move the Cursor to SET TIME.
2. Press down the SELECT DIAL ◀-OK-▶ to go to SetTime Menu.
3. Turn the SELECT DIAL ◀-OK-▶ to move the Cursor to the desired function.
4. Press the UP/DOWN buttons to input correct Date (YYYY/MM/DD) and Time (HH:MM:SS).
5. Press down the SELECT DIAL ◀-OK-▶ when it is done.

## 6.3 Speaker

1. In Set Up Menu, move the Cursor to SPEAKER.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Speaker Menu.
3. Turn the SELECT DIAL ◀-OK-▶ to select speaker ON or OFF, then press down to confirm.

## 6.4 Language

There are nine language options on your, PowBOX V25, English and Traditional Chinese.

1. In Set Up Menu, move the Cursor to LANGUAGE.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Language Menu.
3. Press the UP/DOWN button to select your desired language,
4. Press down the SELECT DIAL to confirm.

## 6.5 Storage

Your PMP comes with internal memory. If there is no external memory card inserted, your PMP will operate with its internal memory. If an external memory card (SD/MMC) is inserted and detected, your PMP will automatically operate with the external memory card only. You can also assign your PMP to use the internal memory to read or write data even if a memory card is inserted. To activate the internal memory:

1. In Set Up Menu, move the Cursor to STORAGE.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Storage Menu.
3. Press the UP/DOWN button to select ON.
4. Press down the SELECT DIAL to activate the internal memory.

## 6.6 TV Out

Your PMP allows you to display the image on the LCD display as well as on your TV set. If "Display on TV set" is selected, the LCD will turn off automatically. To activate TV Out:

1. In Set Up Menu, move the Cursor to TV OUT.
2. Press down the SELECT DIAL ◀-OK-▶ to go to TV Out Menu.
3. Press the UP/DOWN button to select ON.
4. Press down the SELECT DIAL to display image through TV.

20

### 6.7 Auto Power OFF

With this function, you can preset a time that will automatically turn off your PMP when not in use. There are 4 options you can choose from: Never, 3 minutes, 15 minutes or 30 minutes. If NEVER is selected, your PMP will only be turned off when you press the POWER button. To activate the Auto Power OFF:

1. In Set Up Menu, move the Cursor to AUTO POWER OFF.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Auto Power OFF Menu.
3. Press the UP/DOWN button to select Never, 3 minutes, 15 minutes or 30 minutes.
4. Press down the SELECT DIAL to confirm.

### 6.8 Default

The DEFAULT option provides you a quick access to reset your PMP back to the original settings. To do a reset:

1. In Set Up Menu, move the Cursor to DEFAULT.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Default Menu.

### 6.9 Upgrade

This is reserved for future manufacturer upgrades.

## 7 format

This option will allow you to erase all the data stored in the internal or external memory card of your PMP. Therefore, make sure you have made a back up of your data in the PMP before performing this task. To format your PMP:



1. In Set Up Menu, move the Cursor to FORMAT.
2. Press down the SELECT DIAL ◀-OK-▶ to go to Format Menu.
3. Move the Cursor select Yes.
4. Press down the SELECT DIAL ◀-OK-▶ to confirm.



5. To format the internal memory, press SOFTKEY 1 button, then press down the SELECT DIAL to confirm.  
e



 
6. To format the external memory card, press SOFTKEY 2 button and then press down the SELECT DIAL ◀-OK-▶ to confirm.

# 8 bluetooth

23

## 8.1 Bluetooth Stereo

With the latest built-in Bluetooth technology (Bluetooth 1.2 A2DP) and the i.Tech Bluetooth Headset, you can now enjoy wireless stereo sound from your PMP.

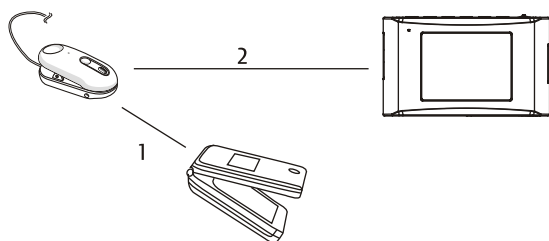

## 8.2 Prepare your Bluetooth Headset

Before using your headset for the first time you **MUST** fully charge it for a minimum least 3 hours. Only use the charging cable or USB cord provided by i.Tech to charge the Headset. When the Headset is fully charged, the red light on the LED will turn BLUE.

IF you have a Bluetooth Compatible mobile Handset and want to use it with your i.Tech Headset, please pair the Headset with the mobile handset **BEFORE** pairing with your PMP.

## 8.3 Pairing the Headset with Your Handset

1. Place the Headset and the mobile handset within a one meter range and make sure there are no obstacle in between.
2. Make sure the headset is turned OFF.
3. Press and hold the MFB until the headset LED alternately flashes blue and red.
4. Activate your mobile handset's Bluetooth function according to your mobile handset user guide.
5. Set the mobile handset to search for Bluetooth devices as instructed in the mobile handset user guide and select "i.Tech stereo headset" from the list.

24

6. Enter the preprogrammed passkey "8888" and press "OK" to pair your Headset and mobile handset. When the pairing has succeeded, the Headset LED will flash blue rapidly for 5 times follow by a long beep.
7. Check your mobile handset for successful activation indication. For certain mobile handset models, a headset icon will appear on the screen. You should now be able to make and receive calls using your headset.

## 8.4 Pairing the Headset with Your PMP

1. Turn off the Headset by pressing and holding the MFB for 3 seconds until you hear a short beep.
2. Turn the headset back on again by holding the MFB until you see the headset LED alternately flash BLUE and RED. Now, your headset is in "pairing mode".
3. Place the headset and your PMP within a 1 meters range, and keep the handset in range as well. Make sure there is no obstacle in between.
4. For your PMP, move the Cursor to select BLUETOOTH in the Main Menu.
5. Press down the SELECT DIAL ◀-OK-▶ to go to Bluetooth Menu.
6. Move the Cursor to select "ON", then press down the SELECT DIAL ◀-OK-▶ to start pairing.
7. The LED on the Headset will have a long flashing BLUE light to indicate the headset has been successfully paired with the PMP as well as your mobile handset.

**IMPORTANT:** If the pairing cannot be completed within 2 minutes, the headset LED will flash PURPLE and RED and emit 3 beeps and then turn off. Please repeat the above Headset-Handset as well as the Headset-PMP pairing procedures again.

# 9 about i.Tech

25

## 9.0 About i.Tech

In this Menu , you will find information about i.Tech as well as the service centers.

1. In Main Menu, move the Cursor to i.Tech.
2. Press down the SELECT DIAL ◀-OK-▶ to go to i.Tech Menu for the requested information.



## care & maintenance

26

### YOUR PMP

- Do not use any batteries, power sources or accessories not specified in this user guide.
- Turn off your PMP if not in use to avoid unintended power consumption.
- Do not drop your PMP or subject it to any physical shock .
- Do not use, place or store your PMP in places exposed to strong sunlight or high temperatures, such as inside the car. Exposure to intensive sunlight and heat may cause your PMP to malfunction, the memory card to bend, and the battery to leak, overheat or explode.
- Your PMP is not waterproof, do not expose it to liquid, moisture or high humidity.
- Do not use abrasive solvents such as paint thinner and benzene to clean your PMP. Doing so may cause damage.
- Do not disassemble or modify your PMP yourself. High-voltage internal parts can result in an electrical shock.
- Do not insert any foreign metallic objects into your PMP. Doing so may cause damage to your PMP.
- Do not expose your PMP to sharp objects.
- If you do not use your PMP for a long period, remove battery from the compartment and store it in a dustless, cool and dry place.
- If your PMP does not work properly or requires repair, contact your dealer or the nearest service centers.


### SD/MMC CARD

- Do not bend, drop or subject the card to vibrations. Doing so could damage the data recorded on it.
- Do not store or use a memory card near anything emitting a strong magnetic field or static electricity, otherwise the data recorded on the card may be lost.
- Do not spill water or expose the memory card to direct sunlight or a heat source. It will make the card unusable.
- Do not store the memory card in hot, dusty or humid conditions.

#### BATTERY & CHARGER

- Only use the iTech USB cable or AC power USB charger provided to charge your PMP as well as the Headset.
- Do not disassemble or modify the battery and the charger. Doing so may expose you to high-voltage internal parts and cause electrical shock or other risks.
- Do not use the charger near a heat source, extreme high and low temperatures or in damp areas.

## safety information

- Keep your PMP and the accessories out of reach of small children. Small parts may be a choking hazard.
- Do not handle the power plug with wet hands.
- Do not use your PMP where there is flammable gas to prevent explosion and fire.
- Before using your PMP in the areas like hospitals, blasting areas or inside an airplane, check if it is allowed. Electromagnetic waves emitted by the PMP may interfere with the area's instruments.
- Do not short circuit, disassemble or modify the rechargeable battery. Doing so may cause electrical shock.
- Do not place the batteries near a heat source as this may cause an explosion.
- There is the risk of explosion if the battery is replaced by an incorrect type.
- Dispose of batteries according to local regulations. Do not dispose of them as household waste.
-  Dispose of the packaging and this product in accordance with the latest provisions.

## troubleshooting

### Q1. PMP does not operate.

Cause	Solution
1. Power is not on.	Press and hold the POWER button for 3 seconds.
2. Battery compartment cover opened.	Check the cover and cover it again.
3. Battery voltage too low.	Recharge the battery until full.
4. Bad battery contact.	Clean the battery terminal with a clean and dry cloth.

### Q2. PMP cannot record.

Cause	Solution
1. Duration setting is not right.	Read thoroughly the recording section to preset recording duration again.
2. Memory card full.	Check the SD/MMC card to see the memory space. If it is full, delete data to free memory space on card.
3. Wrong connection.	Check the connection details in accordance with the recording section in this user guide.

### Q3. Headset cannot connect to the PMP.

Cause	Solution
1. Pairing not complete.	Check the pairing procedure in this user guide and do the pairing again. Be sure to pair your mobile phone (if you have one) FIRST then the PMP.
2. Signal not received.	Make sure the connection distance is a maximum of 10 meters and there should be no obstacle in between.
3. Headset and PMP battery voltage too low.	Remove the battery from the PMP for a while, then recharge the PMP and the Headset again.

If all the above have been done and the problems still exist, please call your dealer or bring the product to the nearest service center. For more information, please visit <http://www.itechdynamic.com>



## product specifications

Display	2.5" 262k Colours TFT LCD
Battery	1050mAh Li-Polymer Rechargeable Battery
Internal Memory	100MB Usable
External Memory	Up to 1GB SD/MMC Card
Interface	USB 1.1
Bluetooth Specification	Version 1.2 Class 2
Bluetooth Profile Supported	A2DP Profile
Bluetooth Frequency	2.4GHz Spectrum
Dimensions	110 mm (L) x 68mm (W) x 20mm (H)
Nominal Charging Time	Within 3 hours
Operating Time	Up to 3 hours
Weight	118 grams



We, i.Tech Dynamic Ltd., declare that the following product:

Product Name: Portable Multimedia Player-PowBOX V25

Model No.: C51-A04105-XX

Is in conformity with the following essential requirements of Council Directive 1999/5/EC(referred to as R & TTE Directive): Article 3.1a, 3.1.b and 3.2. and the product is manufactured in accordance with Annex II of above directive.

A copy of the Declaration of Conformity can be found at:

<http://www.itechdynamic.com>



Dispose of the packaging and this product in accordance with the latest provisions.

©2005 Hutchison Harbour Ring Enterprises Limited

All rights in this publication are reserved and no part may be reproduced without the prior written permission of the publisher. The contents of this publication are believed to be correct at the time of going to press, but any information, specifications, products or services mentioned may be modified, supplemented or withdrawn without further notice.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

 
 
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
 
The Stylized i.Tech logos are trademarks owned by Hutchison Harbour Ring Enterprises Limited or its affiliates.

Bluetooth® and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc, USA and licensed to i.Tech Dynamic Limited.

i.Tech declares under our sole responsibility that the device is in conformity with the provisions of the following Council Directives: 1999/5/EC

Printed in China

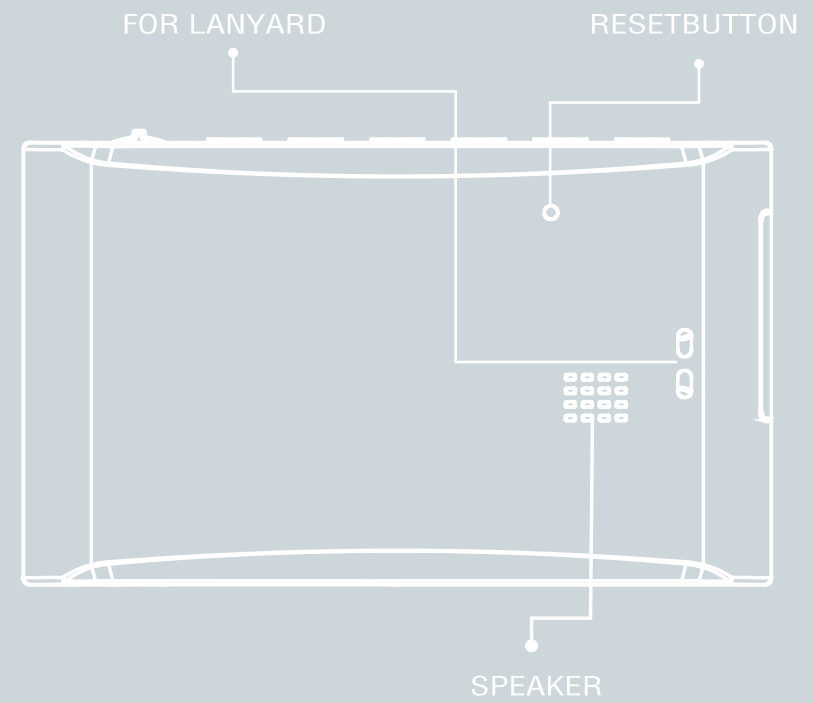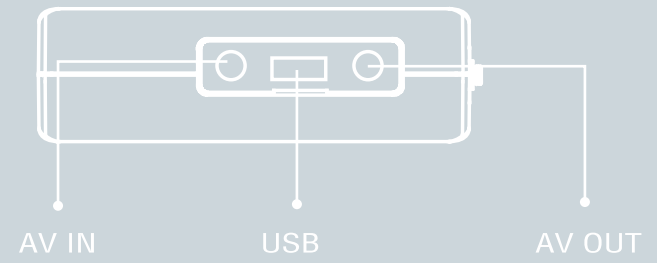

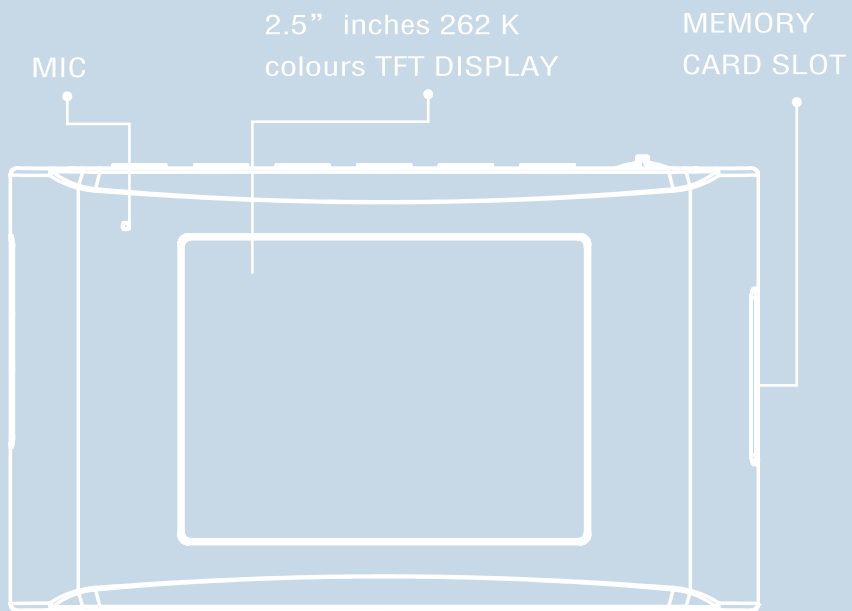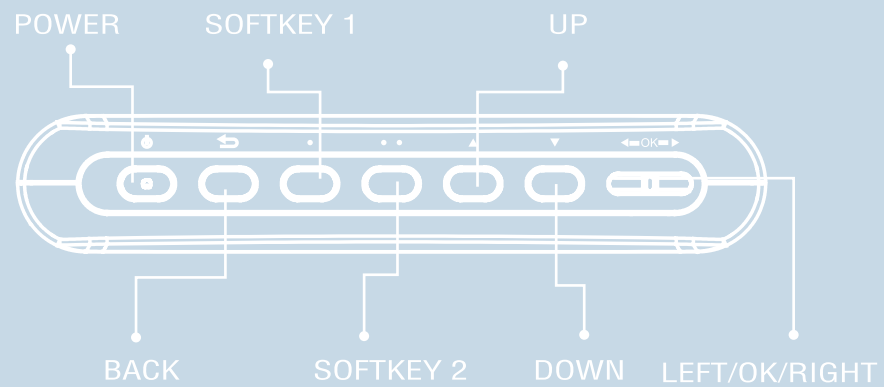

[www.itechdynamic.com](http://www.itechdynamic.com)